


Operating Instructions

Product : WK1104 Microwave 1000w 13amp 3kw

Feature Diagram

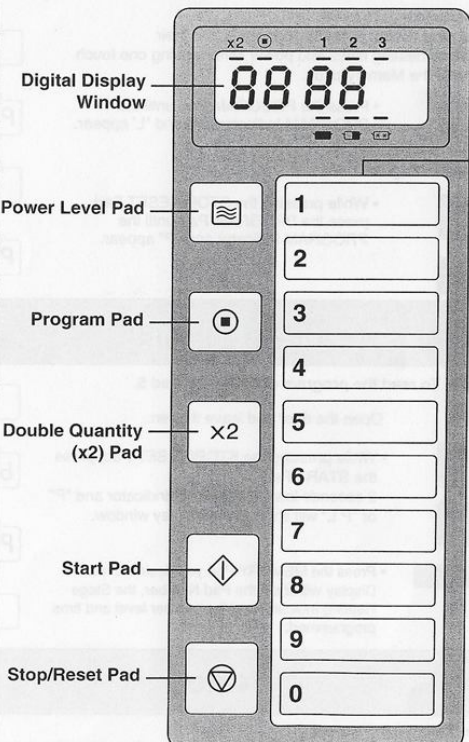

Memory Pads:
Memory Pads have been preset to 1000 W at the indicated heating times for single stage heating.

Pad	Time
1	4 min. 30 sec.
2	4 min. 30 sec.
3	7 min.
4	3 min. 30 sec.
5	4 min.
6	4 min. 30 sec.
7	5 min.
8	5 min. 30 sec.
9	6 min.
0	30 sec.

Manual Heating (or Defrosting)

Place the food in the oven cavity and close the door.
"0" must be showing in the display window.

Example: 30 seconds at 1000 W

- Select the desired power level.
 (1000 W)..... press once
 (500 W)..... press twice
 (340W Defrost) press 3 times
- Select the desired heating time by pressing the MEMORY Pads.
- Press START Pad.

For 2 or 3 stage heating (or Defrosting);
Repeat Steps 1 to 2 above before pressing the START Pad.

Programmed Heating

Place the food in the oven cavity and close the door.
"0" must be showing in the display window.

In Program Lock Mode
Example: MEMORY Pad 3

For Single Portion:

- Press the desired MEMORY Pad.

For Multiple Portion:

- Press the DOUBLE QUANTITY Pad.
- Press the desired MEMORY Pad.

In Program Unlock Mode
Press the START Pad after pressing the desired MEMORY Pad.



In the event of a breakdown or unsatisfactory working of hired equipment Well Dressed Tables should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Well Dressed Tables to do so. No responsibility will be accepted by Well Dressed Tables for any accident or damage resulting from the use of equipment hired whatever the cause.