

## Operating Instructions

**Product : WK1710 Double Electric Hob Unit 240v 13amp 2kw**

---



### 4. Operation

The operation of this appliance should only be carried out by personnel that have been instructed in the operation of the appliance.

Connect the plug to the socket. The green indicator will flash on, which indicates that power has been supplied to the unit. Rotate the thermostat knob clockwise. Set the temperature at your desired position. There are three levels. On the first level position, the power input is 1/3 of the total power input. On the second level position, the power input is 2/3 of the total power input. On the third level, the power input is the total value. If you rotate the knob to any level, the yellow indicator will flash on. The yellow indicator will strengthen when the heating input increases. When the set temperature has been reached, the power supply will be cut off automatically.

When the appliance is no longer in use, rotate the thermostat knob anti-clockwise to its original starting position. Shut the power supply off. If something unusual occurs, contact a qualified technician for repair.

**WARNING: When operating this appliance for the first time it is possible that the unit will smoke. This is normal and is only the thin film of oil burning off components and stainless steel and will only last for a short time**

In the event of a breakdown or unsatisfactory working of hired equipment Well Dressed Tables should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Well Dressed Tables to do so. No responsibility will be accepted by Well Dressed Tables for any accident or damage resulting from the use of equipment hired whatever the cause.