

Operating Instructions

Product : WL1120 Under Counter Glass Fridge Two door or Single



 
COLD CONTROL

The temperature of your appliance is controlled by the electronic control (thermostat).

The internal temperature of your appliance is affected by location, room temperature, and frequency of opening the door. The factory settings of the electronic control (thermostat) are set to allow for these conditions. This appliance is designed to operate in ambient temperatures between 16°C and 32°C. Operating outside of these temperature parameters may cause the appliance to perform out of specification.

Adjusting the factory settings of the Electronic Control is not recommended. However, should you wish to do so, details relating to the operation of the Electronic Control are contained in the instructions supplied with this user manual.

ELECTRONIC CONTROL



Front Panel Operation

1. Set temperature
 - Press SET button, the set temperature is displayed.
 - Press "▲" or "▼" button to modify and store the displayed value, Press SET button to exist the adjustment and display the cold room temperature.
 - If no more buttons is pressed within 10 seconds, the cold room temperature is displayed.
2. Refrigerant LED: During refrigeration, the LED is on; when the cold room temp. is constant, the LED is off; During the delay start, the LED flashes.

Note: The temperature controller cannot be installed in the area with water drops.

In the event of a breakdown or unsatisfactory working of hired equipment Well Dressed Tables should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Well Dressed Tables to do so. No responsibility will be accepted by Well Dressed Tables for any accident or damage resulting from the use of equipment hired whatever the cause.