

Operating Instructions

Product : WH1512 Rice Cooker - 5 litre 240v



Electrical requirements

Check that the voltage on the rating plate of your appliance corresponds with your electricity supply which must be A.C. (Alternating Current).

For appliances supplied with fitted plug


If the socket outlets are not suitable for the plug supplied with this appliance, the plug should be removed and the appropriate one fitted.

WARNING: The plug removed from the mains lead, if severed, must be destroyed as a plug with bared flexible cord is hazardous if engaged into a live socket outlet.

WARNING: This appliance must be earthed.
Should the fuse in the 13A plug require changing, a 13A BS 1362 fuse must be fitted.

Features

- 1 Lid release button
- 2 Heating plate (inside)
- 3 Inner pot
- 4 Handles
- 5 Control panel
- 6 'Cooking' indicator light
- 7 'Warming' indicator light
- 8 One-touch operation switch
- 9 Spatula
- 10 Measuring cup
- 11 Mains cable and plug
- 12 Body
- 13 Water collector
- 14 Lid

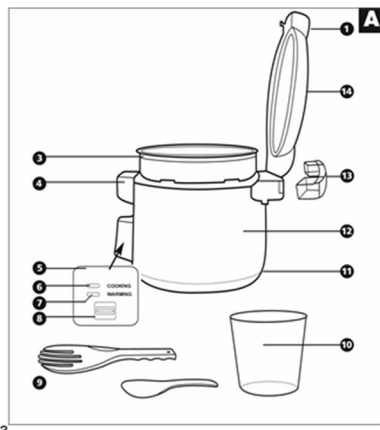

Rice or pasta	Water using measuring cup	Water line inside pot	Approx cooked rice yield	Portion
2 cups	2-2 1/4 cups	Line 10	2.0L	10
3 cups	3-3 1/4 cups	Line 15	3.0L	15
4 cups	4-4 1/4 cups	Line 20	4.0L	20
5 cups	5-5 1/4 cups	Line 25	5.0L	25
6 cups	6-6 1/4 cups	Line 30	6.0L	30

IMPORTANT: Do not fill above the 30 line level indicated.

- 5 Place the pot in the multicooker ensuring that there is no food or any moisture on the outside of the pot and turning slightly from right to left until the pot is properly positioned.
- 6 Close the lid and press down until the latch snaps shut.
- 7 Connect the power cable 11 to the power supply and switch on at the wall socket. The amber 'warming' light 7 will illuminate.
- 8 Press the switch 8 and the multicooker will start, the amber 'warming' light will go out and the red 'cooking' light 6 illuminate.
- 9 When the food is done, the cooker will turn off automatically, the red 'cooking' lamp will then go out and the amber 'warming' lamp will come on.
 - For pasta it is not recommended to utilise the 'warming' feature. Use immediately or chill for regeneration later.
- 10 Keep the lid on for about 10-15 minutes to allow the food to acquire a good appearance and a full flavour.
- 11 Open the lid by pushing the lid release button 1 and allow any condensation to drip into the multicooker. Use a spatula 9 to stir up the food which is then ready to eat. Keep the lid closed to keep the heat in.
- 12 Switch off at the mains and unplug the cooker. Remove the pot to serve the food.
 - Consume the food within 2 hours. Small quantities (3 to 4 cups) should be consumed immediately.
 - Food left to keep warm

should not be allowed to dry out and should be stirred occasionally otherwise it may burn and stick to the pot. *The keep warm period should not exceed 2 hours*

Never take the pot out of the multicooker when it is filled with water.

Cooking packet type savoury rice is not recommended.

1 cup raw rice = 2 cups of cooked rice.

In the event of a breakdown or unsatisfactory working of hired equipment Well Dressed Tables should be notified of the fault. No attempt should be made to repair the item unless permission has been granted by Well Dressed Tables to do so. No responsibility will be accepted by Well Dressed Tables for any accident or damage resulting from the use of equipment hired whatever the cause.